 


### 3-4. Using the rear seat entertainment system

## Rear seat entertainment system features (if equipped)

 
The rear seat entertainment system is designed for the rear passengers to enjoy audio and DVD video separately from the front audio system.

#### ► 5-seat models

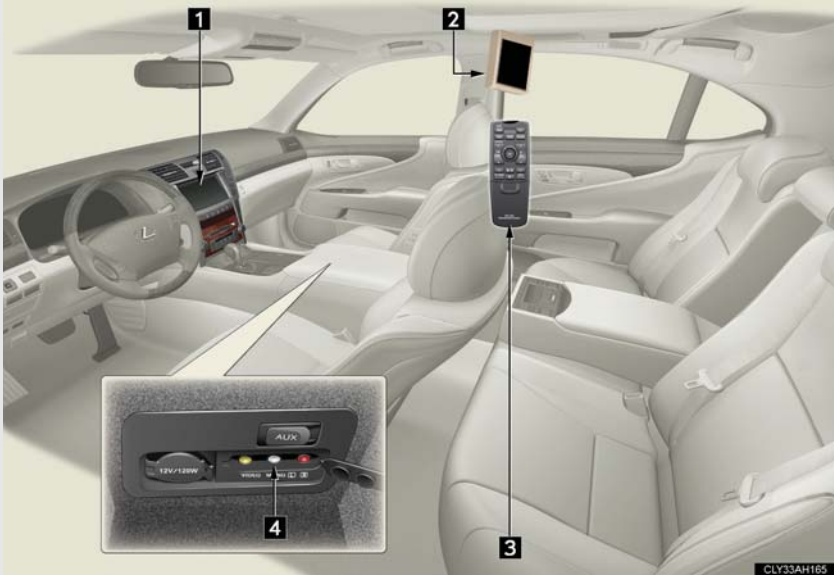

- 1 Front audio system
- 2 Display
- 3 Rear seat entertainment system controller
- 4 A/V input adapter

# ► 4-seat models

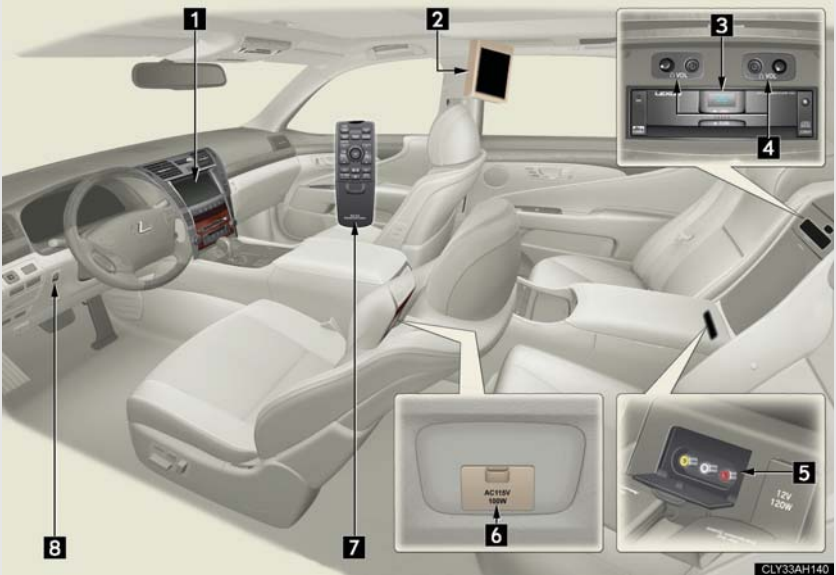

- 1 Front audio system
- 2 Display
- 3 DVD player
- 4 Headphone volume control knobs and headphone jacks
- 5 A/V input adapter
- 6 Power outlet
- 7 Rear seat entertainment system controller
- 8 Power outlet main switch

Rear seat entertainment system controller

 


To use the buttons under the cover, slide the cover down.

Opening and closing the display

n Opening and closing the display

► Without navigation system

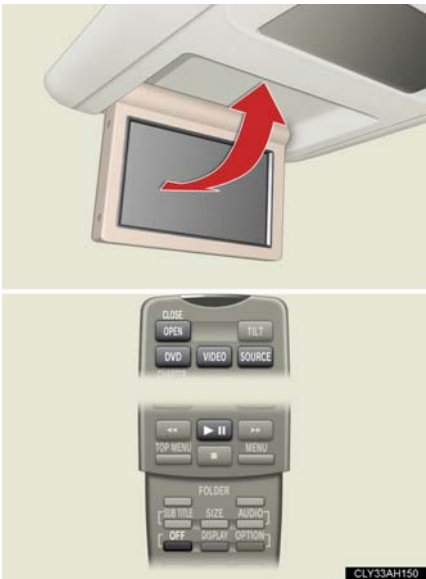

1 Open

Press **CLOSE** **OPEN** , **DVD** , **VIDEO** or **▶ ||** .


1 Close

Press **CLOSE** **OPEN** or **OFF** .

If the display is closed with an image shown, the image will automatically turn off. (The sound will not be turned off.)

Opening and closing operations can be performed from the front seat. (→P. 259)

### ► With navigation system

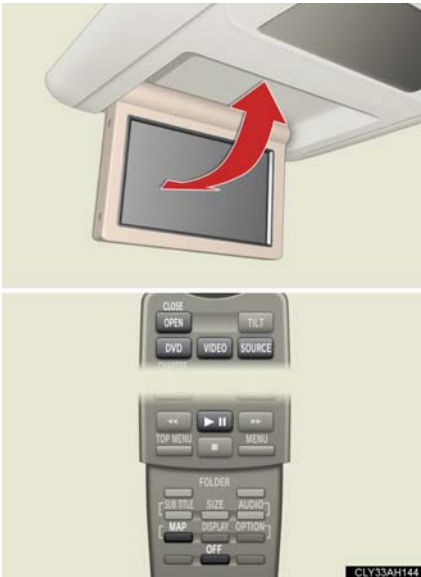 

#### 1 Open

Press **CLOSE** **OPEN** , **DVD** , **MAP** , **VIDEO** or **▶ ||** .

 
#### 1 Close

Press **CLOSE** **OPEN** or **OFF** .

If the display is closed with an image shown, the image will automatically turn off. (The sound will not be turned off.)

Opening and closing operations can be performed from the front seat. (→P. 259)

### n Tilting the display

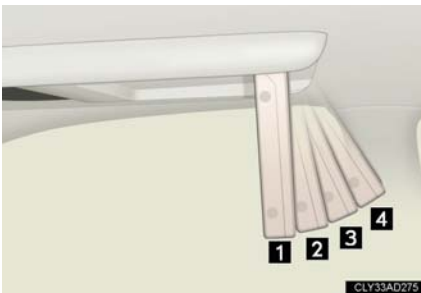

The display angles change as follows each time **TILT** is pressed.

**1** → **2** → **3** → **4** → **1**

The display angle is memorized and will be recalled when the "POWER" switch is turned to ACCESSORY or ON mode again.

n **Caution screen**



This screen appears for a few seconds when the rear display is opened. During this time, only



can be operated.

**Headphone jacks (4-seat models)**



To listen to the rear audio, use headphones.

- 1 To use the headphones  
Connect them to the jack.
- 2 To adjust the volume

Turn the knob clockwise to increase the volume. Turn the knob counterclockwise to decrease the volume.

## Changing the source



Press **SOURCE** to display the audio source selection screen.



Select an audio source.

## Changing the speaker output



To play the rear audio over the speakers in the vehicle, turn **Speaker Output** on.

### n The rear seat entertainment system can be used when

The "POWER" switch is in ACCESSORY or ON mode.

### n Jam protection function

The display will stop closing and return to its previous position if something gets in the way of it closing.

 
### n When appears on the screen

It indicates that the selected icon cannot be used at this time.

### n Rear system lock

→P. 259

### n Before using the controller (for new vehicle owners)

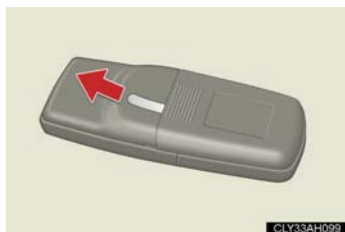

An insulating sheet is set to prevent the batteries from being depleted. Remove the insulating sheet before using the remote control.

### n When the controller batteries are fully depleted



Remove the depleted batteries and install new batteries.

### n Headphones

With some headphones generally available in the market, it may be difficult to catch signals properly. Lexus recommends the use of Lexus genuine wireless headphones.

Contact your Lexus dealer for further details.

### n Volume

- l Adjust the volume when you connect the headphones to the jack. Loud sounds may have a significant impact on the human body.
- l Conversational speech on some DVDs is recorded at a low volume to emphasize the impact of sound effects. If you adjust the volume assuming that the conversations represent the maximum volume level that the DVD will play, you may be startled by louder sound effects or when you change to a different audio source. Be sure to adjust the volume with this in mind.

### CAUTION

#### n When the rear seat entertainment system is not used

Keep the display closed.

In the event of an accident or sudden braking, an occupant may hit the opened display, resulting in injury.

#### n To prevent accidents and electric shock

Do not disassemble or modify the remote control.

#### n When the remote controller is not used

Stow the remote controller.

Injuries may result in the event of an accident or sudden braking.

#### n Closing the display

Never use any part of your body to intentionally activate the jam protection function.

#### n For vehicles sold in the U.S.A. and Canada

- l Laser products (→P. 293)



#### NOTICE

##### **n Cleaning the display**

Wipe the display with a dry soft cloth.

If the screen is wiped with a rough cloth, the surface of the screen may be scratched.

##### **n To prevent damage to the remote control**

1 Keep the remote control away from direct sunlight, high temperature and high humidity.

1 Do not drop or knock the remote control against hard objects.

1 Do not sit on or place heavy objects on the remote control.

##### **n DVD player**

Never try to disassemble or oil any part of the DVD player. Do not insert anything other than a disc into the slot.

##### **n Closing the display**

Do not close the display using your hand. Doing so may result in a malfunction.


3-4. Using the rear seat entertainment system

# Using the radio




Select radio mode on the source screen to display the control screen.

## Selecting a preset station

Press  $\wedge$  or  $\vee$  on  until the desired station band appears on the screen.

 
## Tuning the station

Press  $\wedge$  or  $\vee$  on  until the desired station appears on the screen.

Press  $\wedge$  or  $\vee$  on  and the stations will be searched automatically one after another.


### 3-4. Using the rear seat entertainment system

## Using the front DVD changer

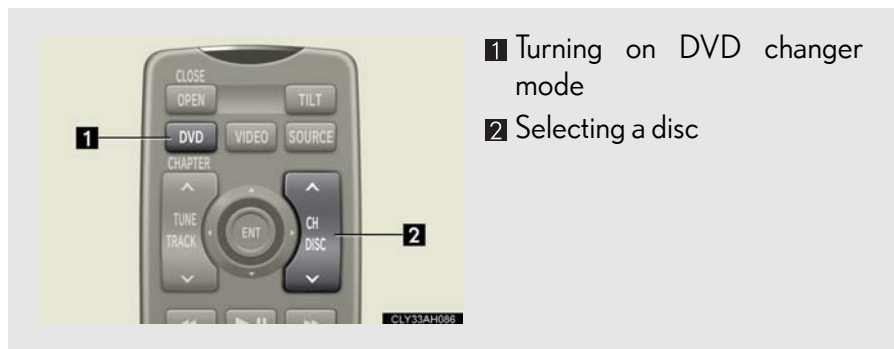

### Selecting a disc



Press  $\wedge$  or  $\vee$  on  until the desired slot number appears on the screen.

- 1 Audio CD, CD text → P. 361
- 1 MP3/WMA disc → P. 362
- 1 DVD video/audio → P. 364
- 1 Video CD → P. 377

### 3-4. Using the rear seat entertainment system

## Using the rear DVD player (4-seat models)



Press **DVD** or select “Rr-DVD” on the source screen to display the control screen.

### Loading a disc



Open the cover.

 
Insert the disc into the slot with the label side up.

The “DISC” indicator light turns on while the disc is loaded.

The player will play the track or chapter, and will repeat it after it reaches the end.


**STEP 3** Close the cover.

Ejecting a disc

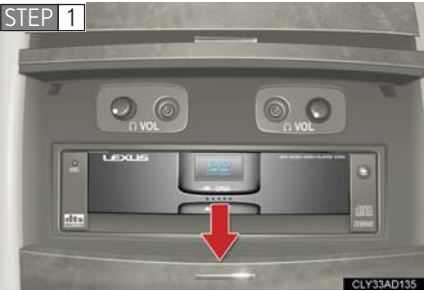

Open the cover.



Press  and remove the disc.

STEP 3 Close the cover.

Playing a disc



- 1 Audio CD, CD text →P. 361
- 1 MP3 disc →P. 362
- 1 DVD video/audio →P. 364
- 1 Video CD →P. 377


The rear DVD player cannot play WMA files.

3-4. Using the rear seat entertainment system


Playing an audio CD/CD text

n Selecting a track



Press  $\wedge$  or  $\vee$  on  until the desired track number appears on the screen.

n Fast forwarding or reversing a track


Press and hold  $\wedge$  or  $\vee$  on .

3-4. Using the rear seat entertainment system

 
Playing WMA (front DVD changer only)/MP3 discs

n Selecting a file




Press  $\wedge$  or  $\vee$  on  until the desired file number appears on the screen.

n Selecting a folder

Press  $\wedge$  or  $\vee$  on  until the desired folder number appears on the screen.

n Fast forwarding or reversing a file

Press  $\wedge$  or  $\vee$  on .


3-4. Using the rear seat entertainment system

**Playing the HDD audio (vehicles with navigation system)**




Select “HDD” on the source screen to display the control screen.


**Selecting a track**

Press  $\wedge$  or  $\vee$  on  until the desired track number appears on the screen.

**Selecting a list**

Press  $\wedge$  or  $\vee$  on  until the desired track number appears on the screen.

**Fast forwarding or reversing a track**

Press  $\wedge$  or  $\vee$  on .



### 3-4. Using the rear seat entertainment system

## Playing DVD video/audio

#### n Controller

 



- 1 Turning on the DVD mode
- 2 Selecting a chapter/track
- 3 Reversing a disc
- 4 Turning on the title selection screen
- 5 Changing the subtitle language
- 6 Turning on the control icon screen
- 7 Changing the audio language
- 8 Stopping a disc
- 9 Turning on the menu disc
- 10 Fast forwarding a disc
- 11 Playing/pausing a disc
- 12 Selecting an icon
- 13 Inputting the selected icon

## n Control icon screen


Press **OPTION** if no icons are shown while watching a DVD video, and the following screen appears.


### ► DVD video mode

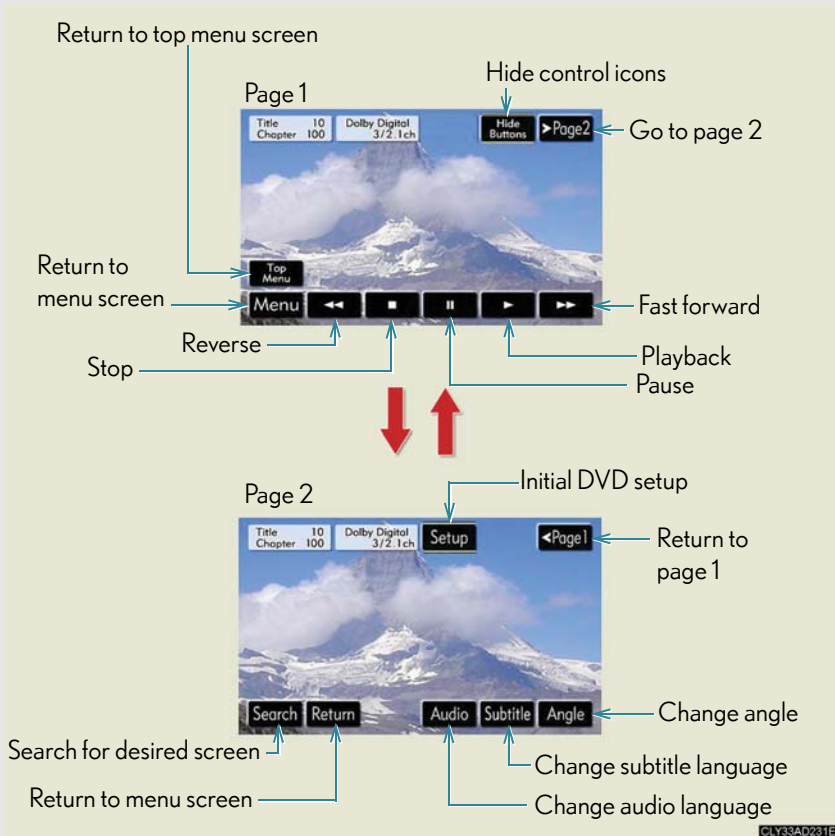


If  appears on the screen when you select an icon, the operation relevant to that control is not permitted.

 ► DVD audio mode

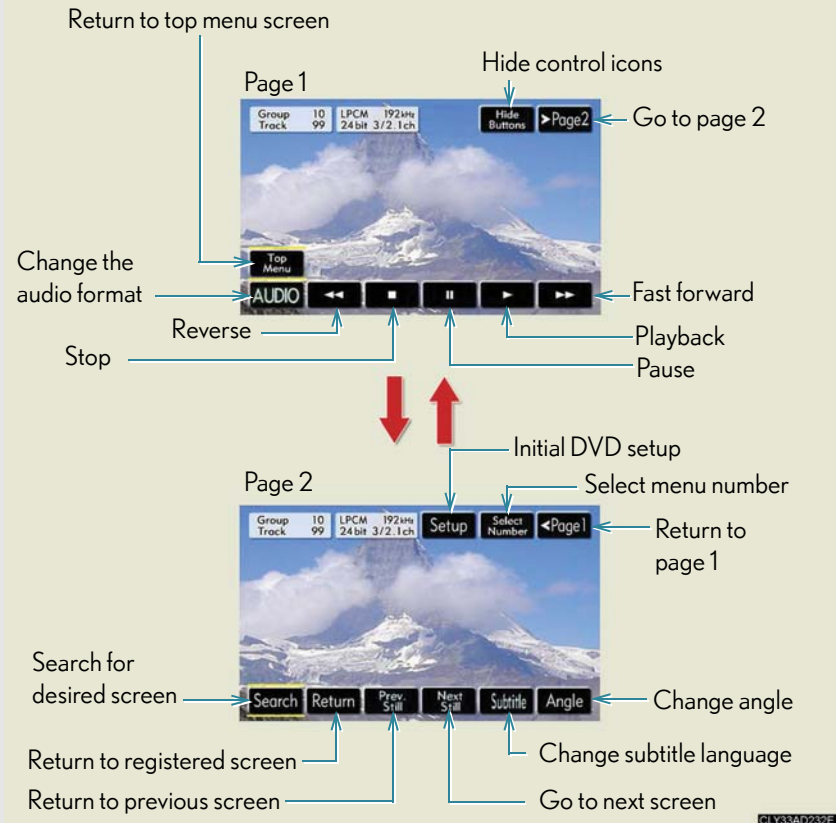



If  appears on the screen when you select an icon, the operation relevant to that control is not permitted.

### Turning on or off the control icons



Press  to turn on the control icons.

Press  once again or select  to turn off the control icon.

### Turning on the title selection screen




Press  or select  to turn on the title selection screen. For the operation of the title selection screen, see the separate manual for the DVD disc.

### Turning on the menu screen (DVD video mode only)

Press  or select  to turn on the menu screen. For the operation of the menu screen, see the separate manual for the DVD disc.

### Fast forwarding/reversing a disc

Perform either of the following:

- 1 Select  or  on the screen by pressing and holding .

- 1 Press and hold  or  on the screen.



### Slow playback

Select  and then select . Video is played slowly when you select  by pressing and holding .

## Returning to the previous screen

 
Select **Return** to return to the previous screen. For the operation of the menu screen, see the separate manual for the DVD disc.

## Searching for a desired screen

### n Searching by title (DVD video mode)

**STEP 1** Select **Search** on the control icon screen.

**STEP 2**

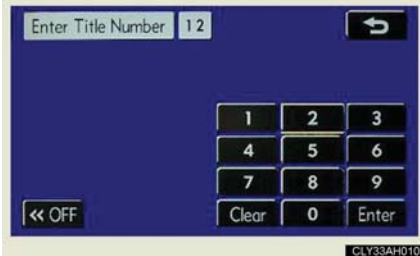

Input the desired title number and then select **Enter**.

**Clear**: deletes the last input number

**<< OFF**: hides the icons. To display the icons, select **>> ON**.

**↩**: returns to the previous screen

### n Searching by group (DVD audio mode)

**STEP 1** Select **Search** on the control icon screen.

**STEP 2**



Input the group number and then select **Enter**.

**Clear**: deletes the last input number

**<< OFF**: hides the icons. To display the icons, select **>> ON**.

**↩**: returns to the previous screen

- n **Playing a bonus group (DVD audio mode only, if the DVD has bonus options)**

**STEP 1** Select **Search** on the control icon screen.


**STEP 2**




CLY33AH012

Input the desired bonus group number on the group search screen and select **Enter**.

 : deletes the number

 : returns to the previous screen

- n **Searching by chapter/track**

Press  $\wedge$  or  $\vee$  on  to select a chapter/track.

- n **Selecting a menu number (DVD audio mode only)**

**STEP 1** Select **Select Number** on the control icon screen.

**STEP 2**



CLY33AH013

Input the desired menu number on the screen and select **Enter**.

Changing the subtitle language

STEP 1 Press **SUB TITLE** or select **Subtitle** on the control icon screen.



Select **Subtitle**.

 
Each time you press **ENT**, the next available language is selected.

**Hide** : hides the control icons

**↶** : returns to the previous screen

Changing the audio language (DVD video only)

STEP 1 Press **AUDIO** or select **Audio** on the control icon screen.

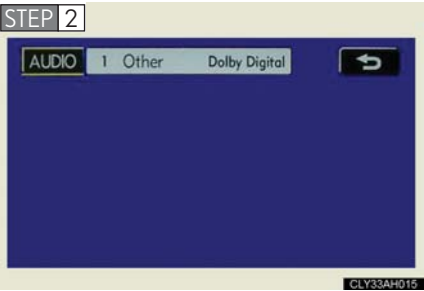

Select **AUDIO**.

Each time you press **ENT**, the next available language is selected.

**↶** : returns to the previous screen

## Changing the audio format (DVD audio only)

**STEP 1** Press **AUDIO** or select **AUDIO** on the control icon screen.

**STEP 2**



Select **Audio**.

 
Each time you press **ENT**, the next available audio format is selected.

**↩**: returns to the previous screen

## Changing the angle (If the angle option is available)

**STEP 1** Select **Angle** on the control icon screen.

**STEP 2**

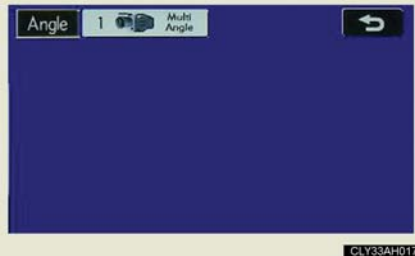

Select **Angle**.

Each time you press **ENT**, the next available angle is selected.

**↩**: returns to the previous screen



Initial DVD setup

n Displaying “Setup Menu” screen

STEP 1 Select **Setup** on the control icon screen.



After you change the initial settings, select **Enter**.

**Default** : restores default settings

n Setting audio language

STEP 1 Select **Audio Language** on the “Setup Menu” screen.

STEP 2 Select the desired language.

If you cannot find the desired language, select **Other** and input the desired language code. (→P. 374)

**↶** : returns to the previous screen

n Setting subtitle language

STEP 1 Select **Subtitle Language** on the “Setup Menu” screen.

STEP 2 Select the desired language.

If you cannot find the desired language, select **Other** and input the desired language code. (→P. 374)

**↶** : returns to the previous screen

n Setting menu language

STEP 1 Select **DVD Language** on the “Setup Menu” screen.


STEP 2 Select the desired language.

If you cannot find the desired language, select **Other** and input the desired language code. (→P. 374)

**↶** : returns to the previous screen

### n Setting angle mark “ON” or “OFF”

 
If the DVD has angle options, you can turn the angle mark on or off.

Select **Angle Mark** on the “Setup Menu” screen. Each time you press , the multi angle mark on the screen turns on or off alternately.


### n Parental lock


**STEP 1** Select **Parental Lock** on the “Setup Menu” screen.

**STEP 2**

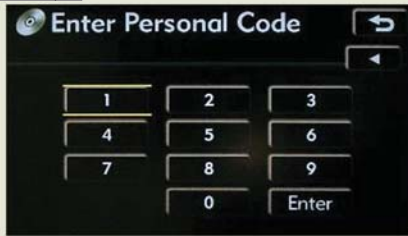


Input the 4-digit password and then select **Enter**.

If you enter wrong numbers, select  to delete the numbers.

Select  10 times to reset the personal code.

**STEP 3** Select a parental level (1 - 8). (→P. 330)


: returns to the previous screen


### n Entering a language code

If you select **Other** on the “Select Audio Language” screen, “Select Subtitle Language” screen or “DVD Language” screen, you can select a language by entering the 4-digit language code if that language is available.



Input the 4-digit language code and then select **Enter**.

: deletes the last input digit

: returns to the previous screen

#### 1 Language codes

Code	Language	Code	Language	Code	Language
0514	English	0207	Bulgarian	0712	Galician
0618	French	0208	Bihari	0714	Guarani
0405	German	0209	Bislama	0721	Gujarati
0920	Italian	0214	Bengali	0801	Hausa
0519	Spanish	0215	Tibetan	0809	Hindi
2608	Chinese	0218	Breton	0818	Croatian
1412	Dutch	0301	Catalan	0821	Hungarian
1620	Portuguese	0315	Corsican	0825	Armenian
1922	Swedish	0319	Czech	0901	Interlingua
1821	Russian	0325	Welsh	0905	Interlingue
1115	Korean	0401	Danish	0911	Inupiak
0512	Greek	0426	Bhutani	0914	Indonesian
0101	Afar	0515	Esperanto	0919	Icelandic
0102	Abkhazian	0520	Estonian	0923	Hebrew
0106	Afrikaans	0521	Basque	1001	Japanese
0113	Amharic	0601	Persian	1009	Yiddish
0118	Arabic	0609	Finnish	1023	Javanese
0119	Assamese	0610	Fiji	1101	Georgian
0125	Aymara	0615	Faroese	1111	Kazakh
0126	Azerbaijani	0625	Frisian	1112	Greenlandic
0201	Bashkir	0701	Irish	1113	Cambodian
0205	Byelorussian	0704	Scots-Gaelic	1114	Kannada

Code	Language	Code	Language	Code	Language
1119	Kashmiri	1415	Norwegian	1914	Shona
1121	Kurdish	1503	Occitan	1915	Somali
1125	Kirghiz	1513	(Afan) Oromo	1917	Albanian
1201	Latin	1518	Oriya	1918	Serbian
1214	Lingala	1601	Panjabi	1919	Siswati
1215	Laothian	1612	Polish	1920	Sesotho
1220	Lithuanian	1619	Pashto, Pushto	1921	Sundanese
1222	Latvian	1721	Quechua	1923	Swahili
1307	Malagasy	1813	Rhaeto- Romance	2001	Tamil
1309	Maori	1814	Kirundi	2005	Telugu
1311	Macedonian	1815	Romanian	2007	Tajik
1312	Malayalam	1823	Kinyarwanda	2008	Thai
1314	Mongolian	1901	Sanskrit	2009	Tigrinya
1315	Moldavian	1904	Sindhi	2011	Turkmen
1318	Marathi	1907	Sangho	2012	Tagalog
1319	Malay	1908	Serbo- Croatian	2014	Setswana
1320	Maltese	1909	Sinhalese	2015	Tonga
1325	Burmese	1911	Slovak	2018	Turkish
1401	Nauru	1912	Slovenian	2019	Tsonga
1405	Nepali	1913	Samoan	2020	Tatar

3-4. Using the rear seat entertainment system

Code	Language	Code	Language	Code	Language
2023	Twi	2209	Vietnamese	2515	Yoruba
2111	Ukrainian	2215	Volapük	2621	Zulu
2118	Urdu	2315	Wolof		
2126	Uzbek	2408	Xhosa		

---

**n Error messages**

If “Region Code Error” is displayed, check if the region code printed on the DVD matches the player's region code.

If a different message is displayed: →P. 327

### 3-4. Using the rear seat entertainment system

## Playing a video CD

 
#### n Controller




- 1 Selecting a track
- 2 Reversing a disc
- 3 Turning on the control icon screen
- 4 Stopping a disc
- 5 Fast forwarding a disc
- 6 Playing/pausing a disc
- 7 Selecting an icon
- 8 Inputting the selected icon

n **Control icon screen**

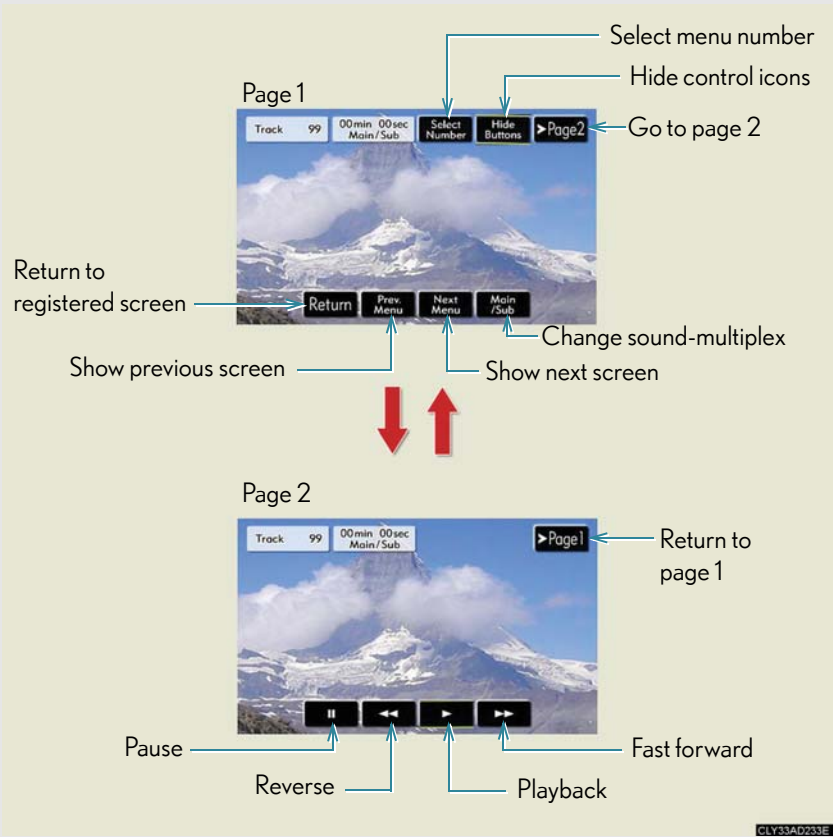


Press **OPTION** if no icons are shown while watching a video CD, and the following screen appears.



If  appears on the screen when you select an icon, the operation relevant to that control is not permitted.

### Fast forwarding/reversing the video CD

Perform either of the following:

- 1 Select  or  on the screen by pressing and holding .

- 1 Press and hold  or  on .

### Slow playback

Select  and then select . Video is played slowly when you select  by pressing and holding .

### Using the video CD menu

Select .

 
Refer to the manual that comes with the video CD for specific menu items.



Selecting a desired screen


n Selecting a menu number

**STEP 1** Select **Select Number** on the control icon screen.

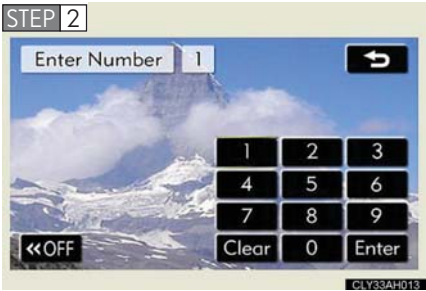


Input the desired menu number on the screen and select **Enter**.

n Searching manually

Select **Prev. Menu** or **Next Menu** on the screen, or press **^** or **v** on  until the desired screen appears.

Changing the sound-multiplex mode

Select **Main /Sub** on the control icon screen. The mode cycles through each time the  is pressed.

“Main” → “Sub” → “Main/Sub”  
↑

## DVD player and DVD video disc information

#### n Error messages

→P. 327

#### n DVD video discs

1 The DVD player conforms to NTSC color TV formats.

1 Region code: Some DVD video discs have a region code indicating the region in which you can use the DVD video disc. If the DVD video disc is not labeled as "ALL" or "1", you cannot use it on this DVD player. If you attempt to play an inappropriate DVD video disc on this player, "Region Code Error" appears on the screen. Even if the DVD video disc does not have a region code, you may not be able to use it.

1 The front DVD player supports multi-channel surround sound. The rear DVD player does not support multi-channel surround sound. (only 2-channel sound is output.)

---

#### n Symbols shown on DVD video discs

→P. 328

#### n Discs that can be used

→P. 329

#### n DVD video disc information

→P. 329

#### n Sound

→P. 331

#### n MP3 and WMA files

→P. 331

### CAUTION

#### n DVD video precaution

→P. 334

#### NOTICE

##### **n Discs and adapters that cannot be used**

→P. 335

##### **n Player precautions**

Failure to follow the precautions below may result in damage to the discs or the player itself.

- l** Do not insert anything other than discs into the disc slot.
- l** Do not apply oil to the player.
- l** Store discs away from direct sunlight.
- l** Never try to disassemble any part of the player.

### 3-4. Using the rear seat entertainment system

## Using the video mode

 


Press **VIDEO** to select the video mode.

Before switching to the video mode, connect the audio-video equipment to the A/V input adapter.

### Using the adapter

#### ► 5-seat models

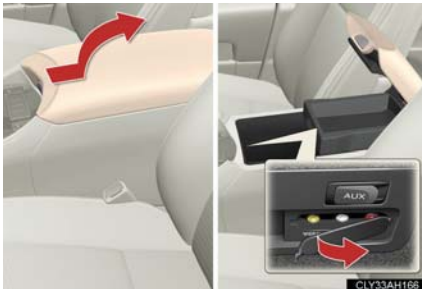

Open the cover.

The A/V input adapter is composed of 3 input adapters.

Yellow: Image input adapter

White: Left channel audio input adapter

Red: Right channel audio input adapter


#### ► 4-seat models


 
## Changing to PAL format



Press **DISPLAY**.

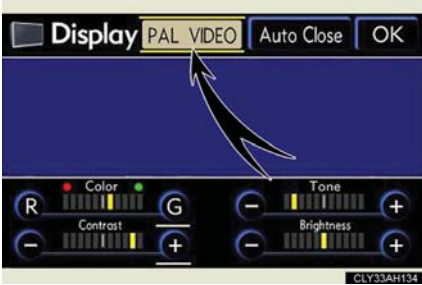

If the video does not appear, turn **PAL VIDEO** on.

**PAL VIDEO** will be displayed when PAL format equipment is connected to the A/V input adapter.

### n A/V input adapter

The rear seat entertainment system plays videos and sound when audio-video equipment is connected to the A/V input adapter. For details, refer to the manufacturer's instructions.

### n Power outlet

The power outlet is used to connect the audio-video equipment. (→P. 455)

## ⚠ NOTICE

### n When the A/V input adapter is not in use

Keep the A/V input adapter cover closed.

Inserting anything other than an appropriate plug may cause electrical failure or a short circuit.

3-4. Using the rear seat entertainment system

# Changing other settings

## Setting the display mode



Pressing **SIZE** changes the display modes sequentially as follows:

Normal→Wide 1→Wide 2



## Adjusting the screen



 
Press **DISPLAY**.

Select the brightness, contrast, tone or color, and make adjustments.

Press **DISPLAY** or **ENT** to input it.

"Color"	Red	Green
"Tone"	Lighter	Darker
"Contrast"	Weaker	Stronger
"Brightness"	Darker	Brighter

Automatic closing of the rear display

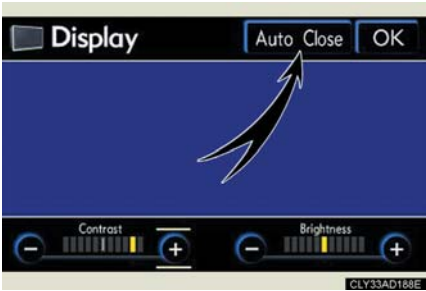

Press **DISPLAY**.

If **Auto Close** is on, the display will automatically close when the “POWER” switch is turned OFF. The display will automatically open when the “POWER” switch is turned to ACCESSORY or ON mode.

Displaying the map screen (with navigation system)



Press **MAP**.

The map screen will appear.